
Unit 1 Exam

QuesNo	Question
1	Knowledge Builder can be accessed from: A Station Help. B Control Builder Help C Windows Desk Top. <div>D All of the above.</div>
2	Which of the following is the definition for the Knowledge Builder Guide? A The Knowledge Builder Guide is a collection of general purpose information. B The Knowledge Builder Guide is a "look it up" manual, not to be read cover to cover. C The Knowledge Builder Guide contains "how it works" information. <div>D The Knowledge Builder Guide is a collection of "how to" procedures.</div>
3	Which of the following is the definition for the Knowledge Builder Theory Manual? A The Knowledge Builder Theory Manual is a collection of general purpose information. B The Knowledge Builder Theory Manual is a "look it up" manual, not to be read cover to cover. <div>C The Knowledge Builder Theory Manual contains "how it works" information.</div> D The Knowledge Builder Theory Manual is a collection of "how to" procedures.

-
- 4 Which of the following is the definition for the Knowledge Builder Reference Manual?
- A The Knowledge Builder Reference Manual is a collection of general purpose information.
 - B The Knowledge Builder Reference Manual is a "look it up" manual, not to be read cover to cover.
 - C The Knowledge Builder Reference Manual contains "how it works" information.
 - D The Knowledge Builder Reference Manual is a collection of "how to" procedures.
- 5 In Control Builder, to add a Control Module or make structural changes to an existing CM you must use the:
- A Project tab

B Monitoring tab
- 6 In Control Builder, to view CMs on line or to change parameters on line, you must use the:
- A Project tab

B Monitoring tab
- 7 To back up your controller data base, you must first ***upload*** to the Monitoring tab, then ***update*** to the Project tab.
- A True

B False

-
- 8 From the RSLinx communication software menu you can select "Configure Drivers" to display a list of the currently configured drivers. What does it mean when the driver, AB KTC-1 Cnet..., indicates Running... ?
- A You should call the Honeywell Technical Assistance Center (TAC).
 - B You need to access the device from the Windows NT Control Panel and disable the driver.
 - C You need to remove the server's ControlNet ISA Interface card and reset its jumpers according to the procedures defined in the Control Hardware Installation Guide.
 - D Your RSLinx communication software has been configured correctly on your system. Running is the expected response indicating the driver is operational.

- 9 To verify the CNet server address, from the RSLinx Communications Menu, click Configure Drivers and in the listing of Configured Drivers, double-click the line starting with "AB-KTC-1 CNet..." and observe the MAC ID.

- | | |
|---|-------|
| A | True |
| B | False |

- 10 To verify the server's Ethernet adapter and IP address, from Control Panel, Network menu, click the Protocols tab, double-click TCP/IP Protocol and from the IP Address tab, verify that your adapter is selected.

- | | |
|---|-------|
| A | True |
| B | False |